



# PRESSURE CARTRIDGE FILTER

## OPERATING INSTRUCTIONS

1. Place filter on flat surface.
2. Tighten locking ring-clockwise.
3. Open all (optional) valves to ensure that water can flow freely from pool to filter. Make sure drain plug is tight. (Caution: Failure to do so could result in severe personal injury and/or property damage)
4. Run pump.
5. Turn air relief valve counter-clockwise in filter head until loose.
6. When a steady stream of water is discharged from the valve, tighten air relief valve by rotating valve clockwise.

## FILTER MAINTENANCE

Clean or Replace filter element when gauge pressure increases 5-7 PSI above the original starting pressure or whenever the return water flow diminishes.


1. Turn pump off before servicing.
2. Close all pool water valves to prevent backflow from pool.
3. Open air relief valve by turning valve counter-clockwise until loose.
4. Remove drain plug, allow water to drain from filter.
5. Open locking ring counter-clockwise, and remove the filter element.
6. Clean the filter element with a Blue Seal Spray Away cleaning tool, remove debris from filter tank bottom.
7. Place cleaned filter element back into housing tank, and tighten ring.
8. Follow all operating instructions above.

## WINTERIZING

1. Remove drain plug and drain tank completely.
2. Clean Filter element and allow it to dry thoroughly.
3. Replace element in tank.
4. Store in a cool dry place.

## MODEL NO.

- PRC30DB
- PRC60DB
- PRC90DB
- PRC120DB
- PRC150DB
- PRC180DB

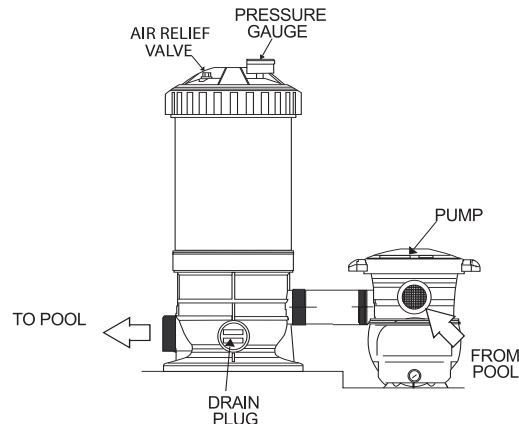

***Designed for Performance and Reliability***